

Shipping & Sampling

Cool the samples ASAP
DO NOT PACK IN DRY ICE

#1



Ensure that the sample is representative
(MIXED WELL)

#2



Ensure that the container is sealed and leak proof.

#3



Label the sample:

- Sample/location
- Date Sampled
- Sampled by (name)

#4



Pack samples, icepacks, and Chain of Custody in a cooler or cooler box.

Considerations



The collection and handling of samples will significantly affect the accuracy of the results. Please consider sample collection location, type (grab or compilation), time of day, temperatures, delays until stabilized (temperature and gas loss), and shipping/delivery (method, speed, etc.).

Packaging Instructions

Packaging Instructions

IATA Regulations: Biological Substances (Category B)

#1



Materials must be triple packaged according to packing Instruction 6 tr

#2



A leak-proof primary receptacle (discussed in Sampling Instructions).

#3




A leak-proof secondary packaging.

#4



Outer rigid packaging of adequate strength for its capacity, mass, and intended use.

Liquid Samples

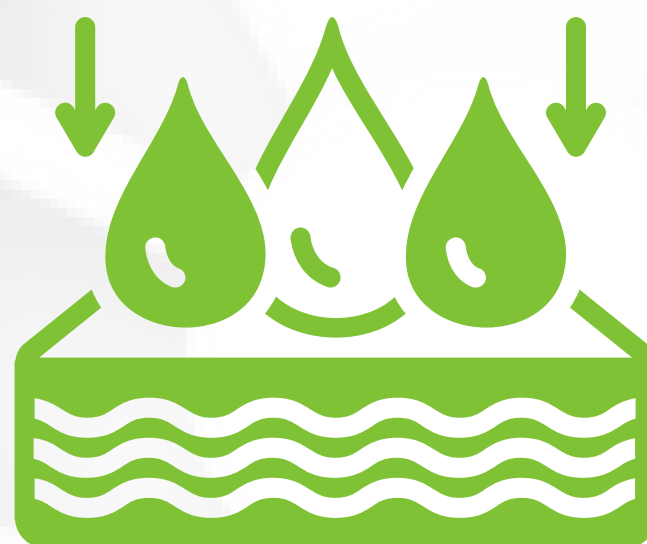

For liquid samples, absorbent material must be placed between the receptacle and secondary packaging in case of spills.

Please email sales@digesterdoc.com or call 208-278-2651 with any questions.

DigesterDoc.com